


HIGHWAY HAWK

passion for chrome

Handlebar watch Art.no 54-250/251/252

Mounting instruction:
Step 1: mount bolt # 6
Step 2: mount bolt # 8

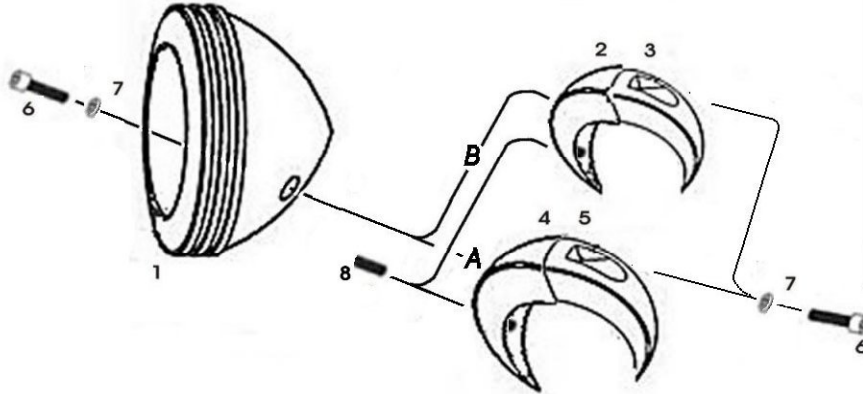

Components

1	Watch-Housing	1x
2	Bracket 1 "A"for $\text{Ø}32 / \text{Ø}1 \frac{1}{4}$ "	1x
3	Bracket 2 "A"for $\text{Ø}32 / \text{Ø}1 \frac{1}{4}$ "	1x
4	Bracket 1 "B"for $\text{Ø}25 / \text{Ø}1$ "	1x
5	Bracket 2 "B"for $\text{Ø}25 / \text{Ø}1$ "	1x
6	Bolt M5	2x
7	Washer M5	2x
8	Lock Bolt	1x

A: Use for handlebar $\text{Ø}32 / 1 \frac{1}{4}$ "

B: Use for Handlebar $\text{Ø}25 / 1$ "

This accessory should be mounted by a professional mechanic only.

MotoLux International B.V. / Highway Hawk can not be held responsible for improper installation.

© Moto-Lux Specialties B.V.


Barneveld - The Netherlands

HIGHWAY HAWK

passion for chrome

Handlebar watch Art.no 54-250/251/252

Mounting instruction:
Step 1: mount bolt # 6
Step 2: mount bolt # 8

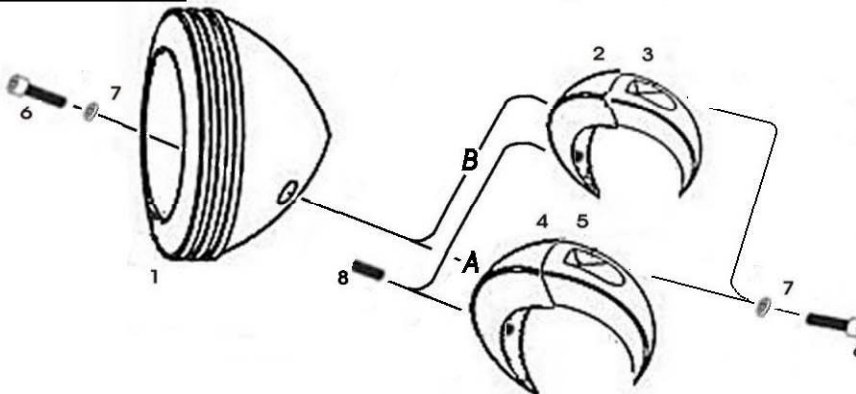

Components

1	Watch-Housing	1x
2	Bracket 1 "A"for $\text{Ø}32 / \text{Ø}1 \frac{1}{4}$ "	1x
3	Bracket 2 "A"for $\text{Ø}32 / \text{Ø}1 \frac{1}{4}$ "	1x
4	Bracket 1 "B"for $\text{Ø}25 / \text{Ø}1$ "	1x
5	Bracket 2 "B"for $\text{Ø}25 / \text{Ø}1$ "	1x
6	Bolt M5	2x
7	Washer M5	2x
8	Lock Bolt	1x

A: Use for handlebar $\text{Ø}32 / 1 \frac{1}{4}$ "

B: Use for Handlebar $\text{Ø}25 / 1$ "

This accessory should be mounted by a professional mechanic only.

MotoLux International B.V. / Highway Hawk can not be held responsible for improper installation.

© Moto-Lux Specialties B.V.

Barneveld - The Netherlands