


# HIGHWAY HAWK

*passion for chrome*

## Handlebar watch Art.no 54-250/251/252

Mounting instruction:  
Step 1: mount bolt # 6  
Step 2: mount bolt # 8

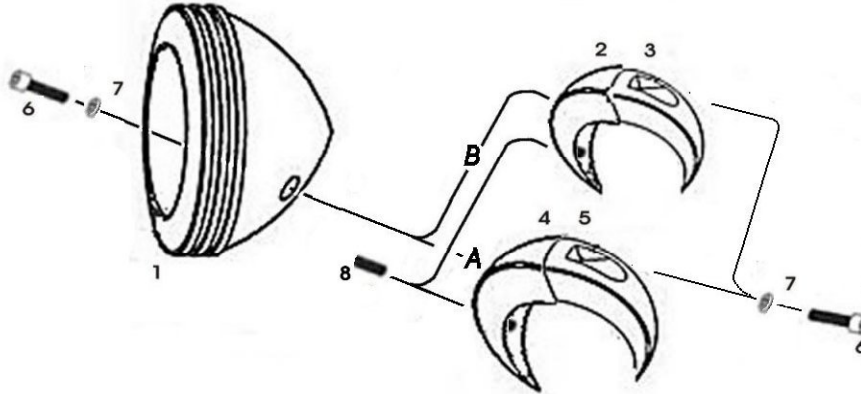

Components		
1	Watch-Housing	1x
2	Bracket 1 "A"for Ø32 / Ø1 1/4"	1x
3	Bracket 2 "A"for Ø32 / Ø1 1/4"	1x
4	Bracket 1 "B"for Ø25 / Ø1"	1x
5	Bracket 2 "B"for Ø25 / Ø1"	1x
6	Bolt M5	2x
7	Washer M5	2x
8	Lock Bolt	1x

**A: Use for handlebar Ø32 / 1 1/4"**

**B: Use for Handlebar Ø25 / 1"**

This accessory should be mounted by a professional mechanic only.

MotoLux International B.V. / Highway Hawk can not be held responsible for improper installation.

© Moto-Lux Specialties B.V.


Barneveld - The Netherlands

# HIGHWAY HAWK

*passion for chrome*

## Handlebar watch Art.no 54-250/251/252

Mounting instruction:  
Step 1: mount bolt # 6  
Step 2: mount bolt # 8

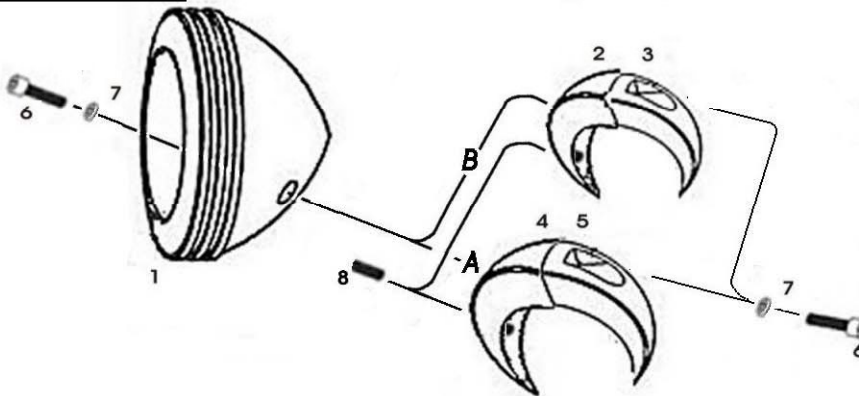

Components		
1	Watch-Housing	1x
2	Bracket 1 "A"for Ø32 / Ø1 1/4"	1x
3	Bracket 2 "A"for Ø32 / Ø1 1/4"	1x
4	Bracket 1 "B"for Ø25 / Ø1"	1x
5	Bracket 2 "B"for Ø25 / Ø1"	1x
6	Bolt M5	2x
7	Washer M5	2x
8	Lock Bolt	1x

**A: Use for handlebar Ø32 / 1 1/4"**

**B: Use for Handlebar Ø25 / 1"**

This accessory should be mounted by a professional mechanic only.

MotoLux International B.V. / Highway Hawk can not be held responsible for improper installation.

© Moto-Lux Specialties B.V.

Barneveld - The Netherlands