


**Components**

1	Fat Bar	1x
2	U-clamp M6	2x
3	Nut M6	4x
4	Lockwasher M6	4x
5	Washer M6	4x
6	Spacer Ø20 x Ø10,5 x 5mm	2x

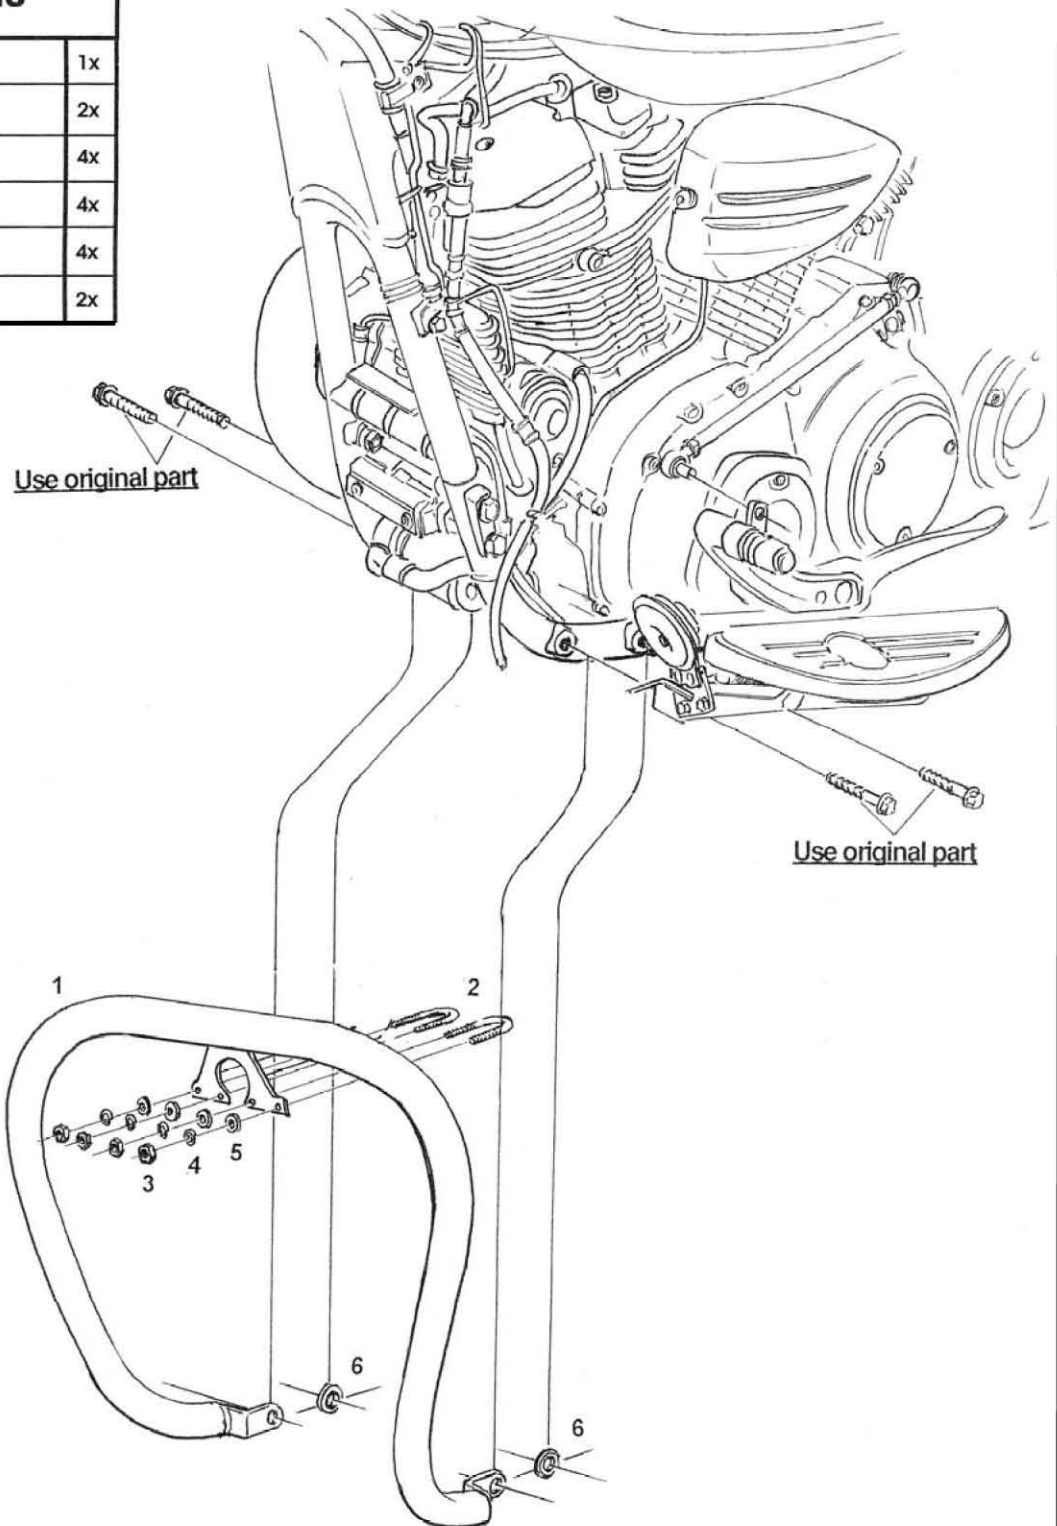

This accessory should be mounted by a professional mechanic only.  
 MotoLux International B.V. / Highway Hawk can not be held responsible for improper installation.

© Moto-Lux Specialties B.V.  
 Barneveld - The Netherlands