




# Saddlebag Support 661-028

## Components

1	Saddlebag support	2X
2	Plug	4X
3	Bolt M10(1.25)x30	2X
4	Bolt M8 x 60	2X

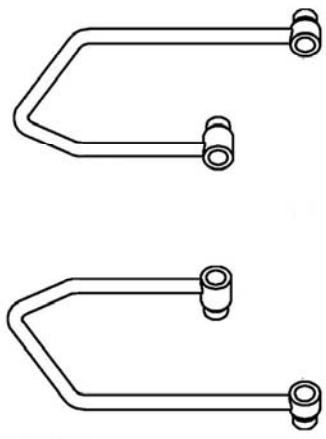

Model for motorcycle

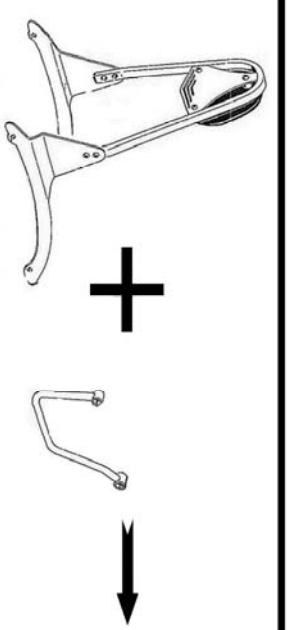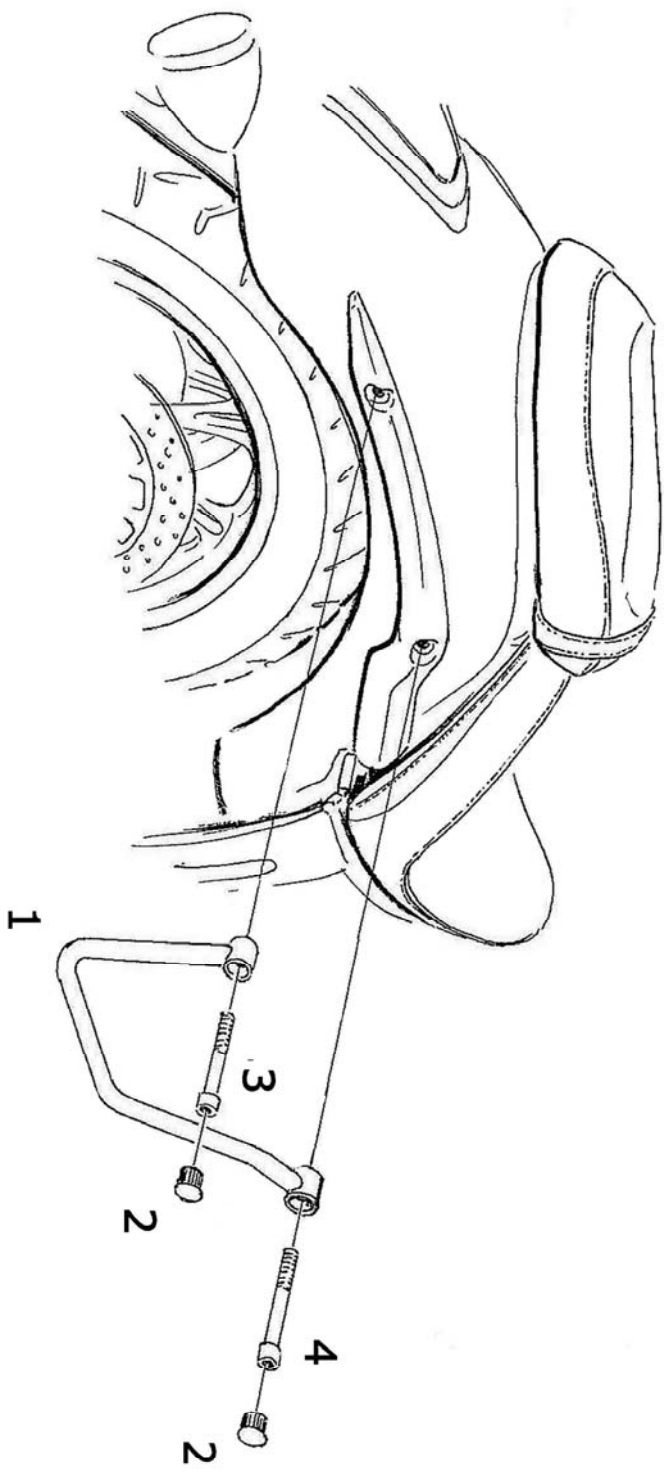

	<b>X</b>
	<b>X</b>
	<b>X</b>
	<b>✓</b>
M6 03-610	
M8 03-810	
M10 03-910 (1.25)	

Please check all fixings and mounting points before assembly as listed on the mounting instruction sheet.

This accessory should be mounted by a professional mechanic only, Motolux International B.V. / Highway Hawk can not be held responsible for improper installation

© Motolux Specialties B.V.  
Barneveld - The Netherlands