
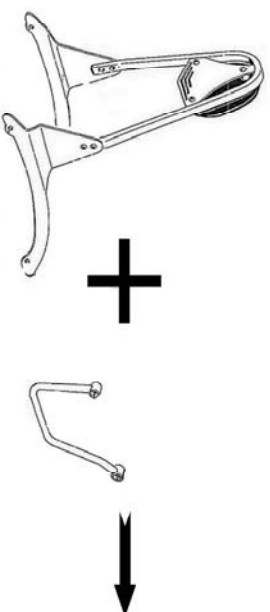


# Saddlebag Support

## 662-033

Components	
1 Saddlebag support	2X
2 Plug	4X
3 Bolt M8 x 55	2X
4 Bolt M8 x 65	2X
5 Bush Ø18x16	2X
6 Bush Ø18x10	2X

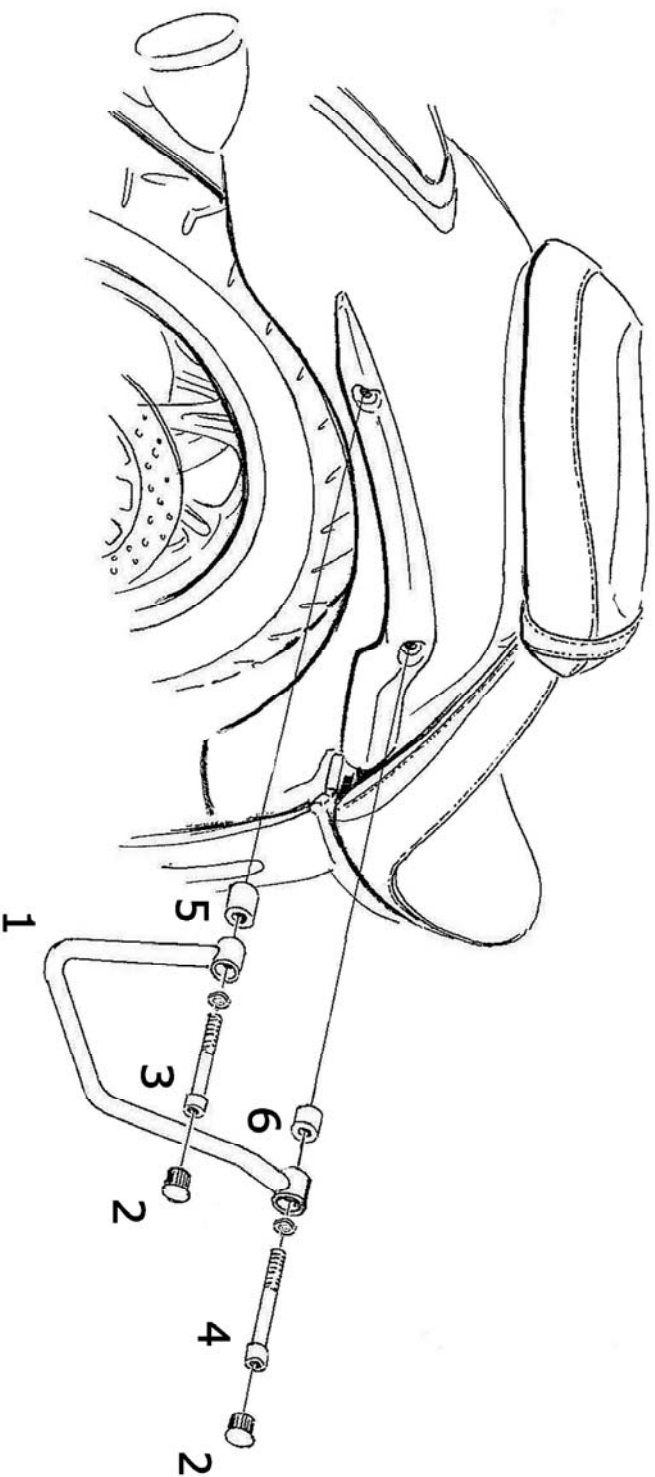

<b>X</b>	<ul style="list-style-type: none"> <li>—</li> <li>—</li> <li>—</li> </ul>
<b>✓</b>	<ul style="list-style-type: none"> <li>—</li> <li>—</li> <li>—</li> </ul>

M6 03-610  
 M8 03-810  
 M10 03-910 (1.25)

Please check all fixings and mounting points before assembly as listed on the mounting instruction sheet.

This accessory should be mounted by a professional mechanic only, Motolux International B.V. / Highway Hawk can not be held responsible for improper installation

© Motolux Specialties B.V.  
Bameveld - The Netherlands