




Saddlebag Support 663-033

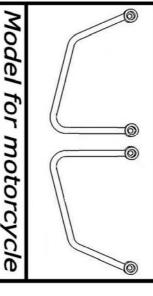

2x	Bolt M8 x 80	4
2x	Bolt M8 x 60	ω
4 ×	Plug	2
2x	Saddlebag support	1
V)	Components	

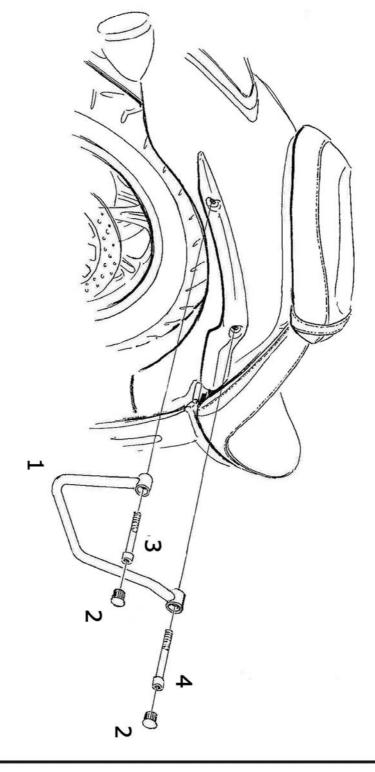



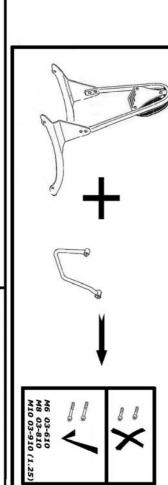

Please check all fixings and mounting points before assembly as listed on the mounting instruction sheet.

This accessory should be mounted by a professional mechanic only, Motolux International B.V. / Highway Hawk can not be held responsible for improper installation

© MotoLux Specialties B.V.

Barneveld - The Netherlands