

HIGHWAY HAWK

passion for chrome



Saddlebag Support HD FL / FX '84-UP

Except see: www.HighwayHawk.com

667-023

Components

1	Saddlebag Support	2x
2	Saddlebag Support plug	4x
3	Bolt 3/8-16 x 1-1/4 "	2x
4	Bolt 3/8-16 x 1-1/2 "	4x
5	Washer / Shim	8x

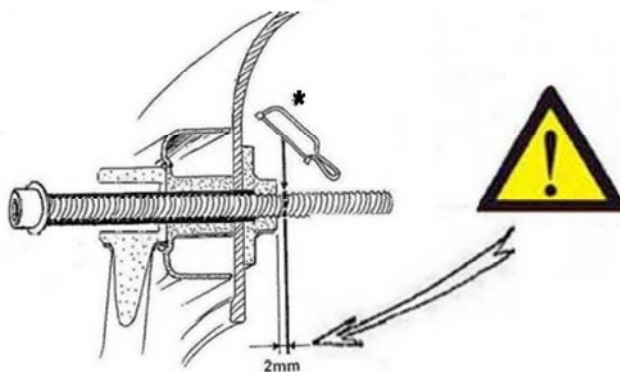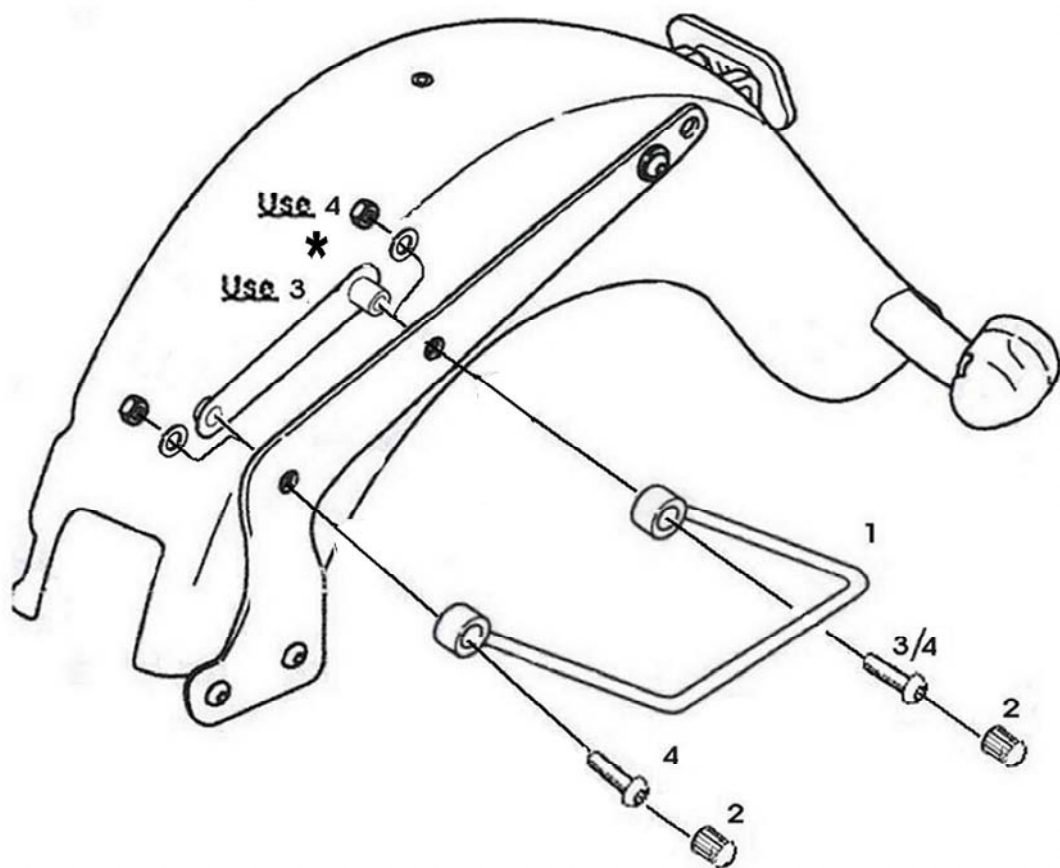

Note: Use loctite 242 (blue) on every bolt. Bolts: use torque wrench: 27ft-lbs / 37Nm. Grap Strap must be removed.

This accessory should be mounted by a professional mechanic only.

MotoLux International B.V. / Highway Hawk can not be held responsible for improper installation.

© Moto-Lux Specialties B.V.

Barneveld - The Netherlands