

Soloseat


Indian Chief Classic/ Vintage

668-040

HIGHWAY HAWK
passion for chrome

HIGHWAY HAWK
passion for chrome

Components	
1 Bracket 1	1X
2 Bracket 2	2X
3 Bracket 3	1X
4 Selflock nut M8	1X
5 Bolt M8 **	1X
6 Selflock nut M6	2X

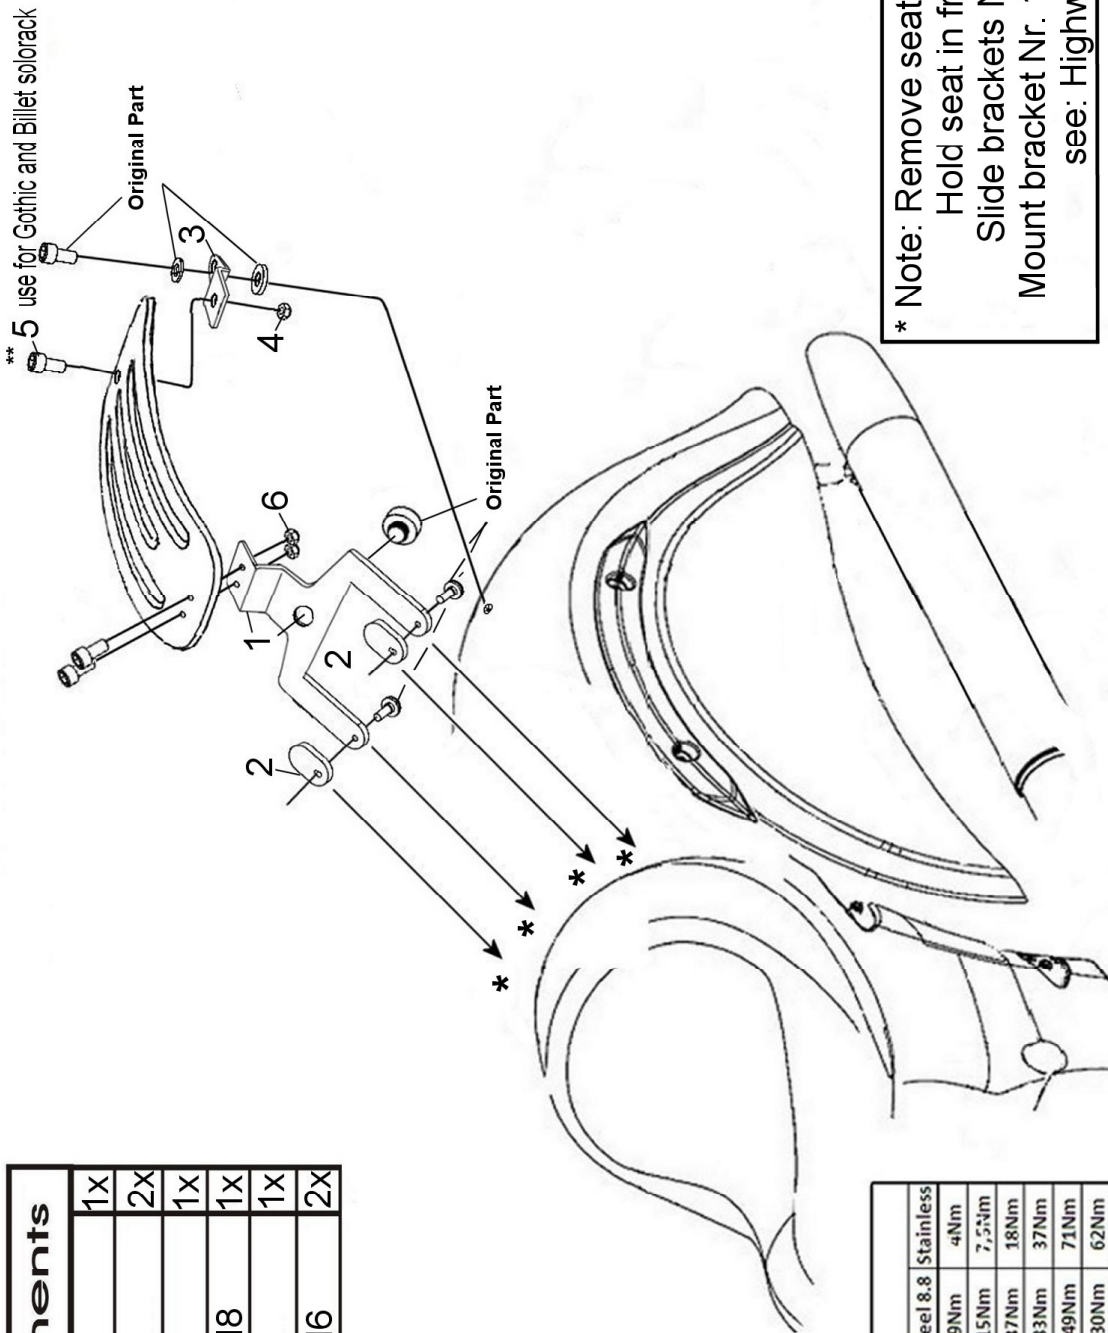

Bolt size / thread	Torque	
	Steel	Steel 8.8 Stainless
M5	6Nm	9Nm
M6	10Nm	15Nm
M8	25Nm	37Nm
M10X1.25	57Nm	83Nm
M12X1.25	101Nm	149Nm
M12	87Nm	130Nm
		62Nm

* Note: Remove seat and disassemble passenger seat.
Hold seat in front of you facing backside.
Slide brackets Nr. 2 in passenger seat slots.
Mount bracket Nr. 1 on the bottom of the front seat.
see: HighwayHawk.com for details

Please check all fixings and mounting points before assembly as listed on the mounting instruction sheet.

This accessory should be mounted by a professional mechanic only, MotoLux International B.V. / Highway Hawk can not be held responsible for improper installation

© MotoLux Specialties B.V.
Barneveld - The Netherlands