


Saddlebag Support



Art.No. 669-030

Components	
1	Saddlebag support 2X
2	Plug 4X
3	Bolt M8x50/60*mm 4X
4	Spacer Ø15x13mm 4X

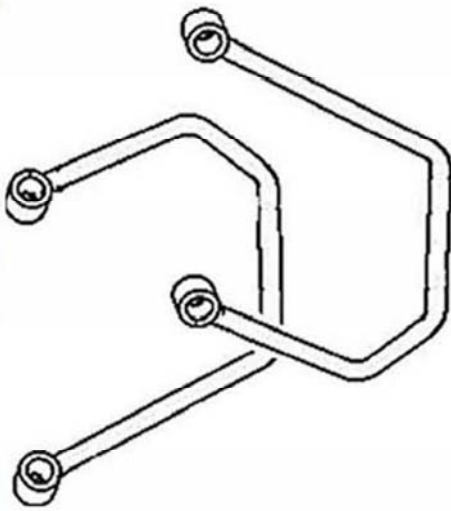

Model for motorcycle

*Note: use 4x2Bush and Bolt M8x60 for model: Judge

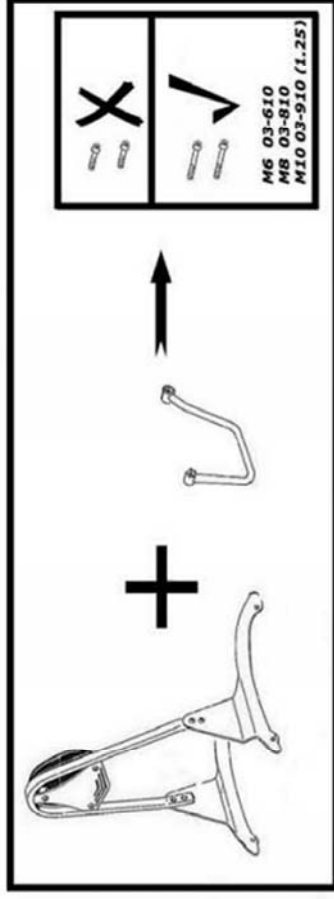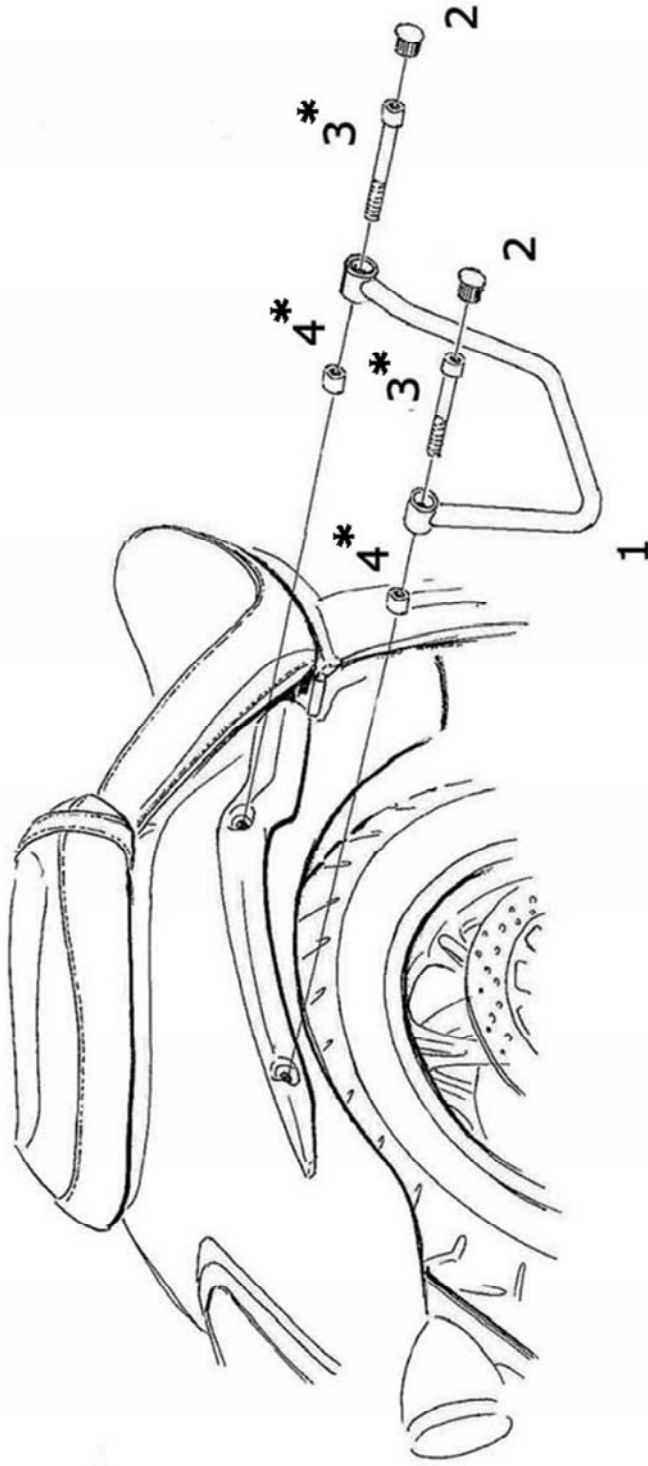

Please check all fixings and mounting points before assembly as listed on the mounting instruction sheet.

This accessory should be mounted by a professional mechanic only. Motolux International B.V. / Highway Hawk can not be held responsible for improper installation

© Motolux Specialties B.V.
Barneveld - The Netherlands

M6 03-610
M8 03-810
M10 03-910 (1.25)