


**Spotlight bracket**  
**HD Narrow-glide**  
WITH bottom mounting for headlight  
**Art. no. 687-201**

**Components**

1	Spotlight bracket	1x
2	Spotlight bracket Plug	2x
3	Bolt 3/8-16 x 2"	1x
4	Bush	1x

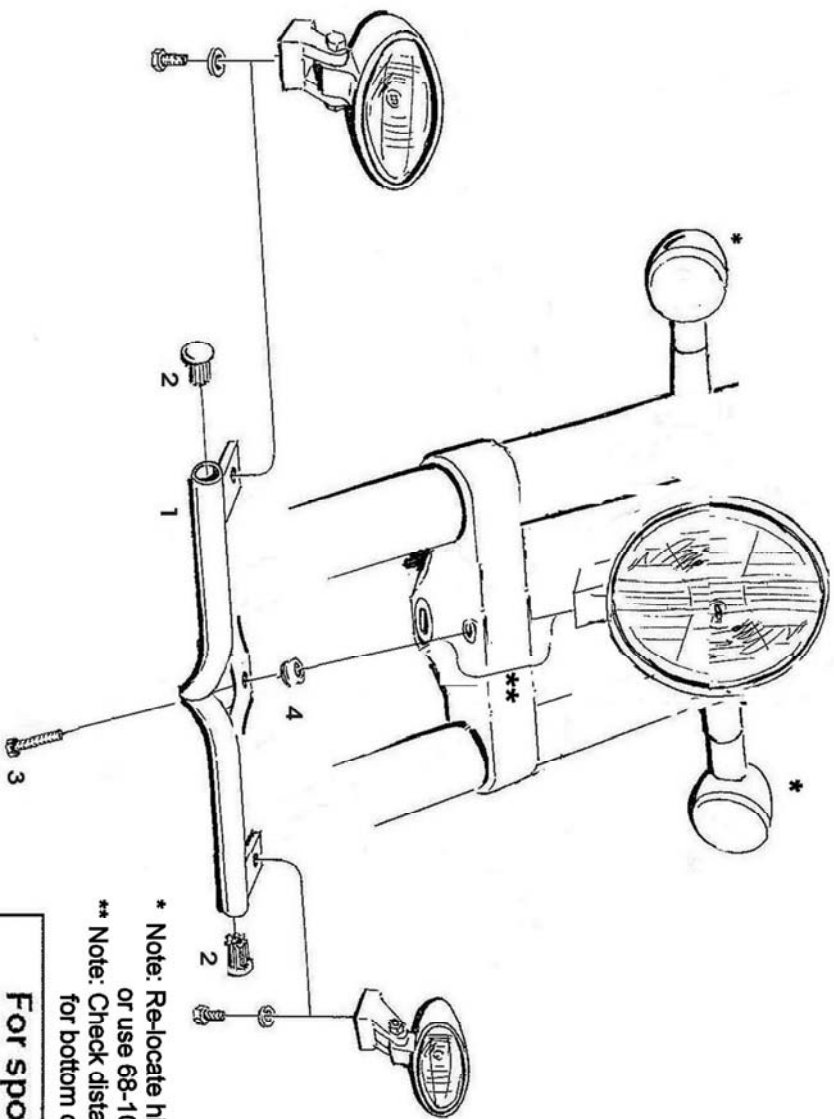

\* Note: Re-locate high mounted turnsignals  
or use 68-101 / 102  
\*\* Note: Check distance between fender and yoke  
for bottom or top mounting.

**For spotlights check**  
**WWW.HIGHWAYHAWK.COM**  
**or the latest Highway Hawk**  
**catalogue**

This product is specially designed for OEM Bikes.

© Moto-Lux Specialties B.V. advises installation by a professional mechanic.  
We do not accept responsibility for improper installation.

© Moto-Lux Specialties B.V.  
Barneveld - The Netherlands

Optionel: 68-101/102  
TurnsignaKit

