


## Components

1	Floorboard	2x
2	Mounting bracket	2x
3	Bolt M12 x 25mm	2x
4	Bolt M8 x 20mm	2x
5	Washer M8	4x

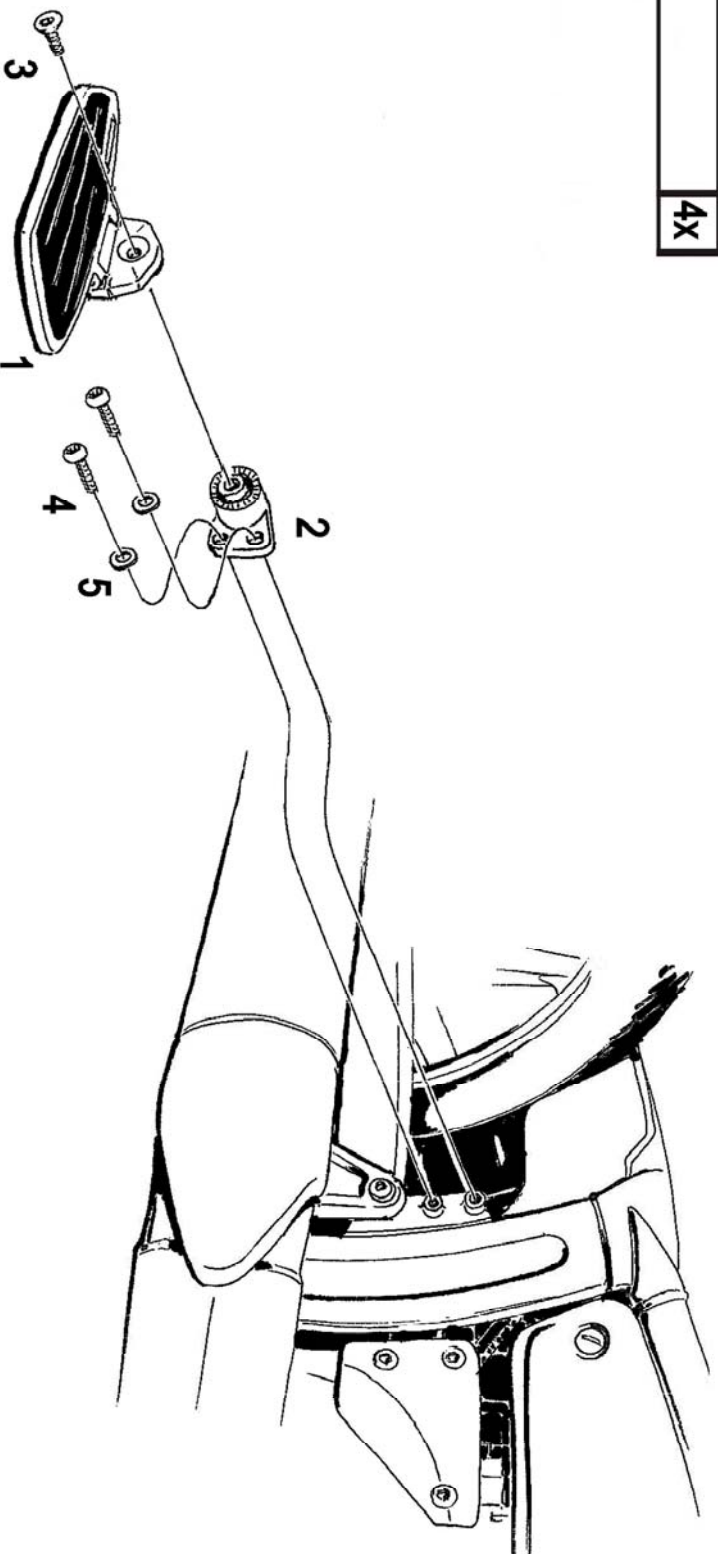

Please check all fixings and mounting points before assembly as listed on the mounting instruction sheet.

This accessory should be mounted by a professional mechanic only, Motolux International B.V. / Highway Hawk can not be held responsible for improper installation

© Motolux Specialties B.V.  
Bameveld - The Netherlands