


| Components | | |
|------------|------------------------|----|
| 1 | Floorboard left | 1x |
| 2 | Floorboard right | 1x |
| 3 | Mounting bracket left | 1x |
| 4 | Mounting bracket right | 1x |
| 5 | Bolt M12x25mm | 2x |
| 6 | Bolt M8x20mm | 8x |
| 7 | Washer M8 | 8x |
| 8 | Locknut M8 | 4x |

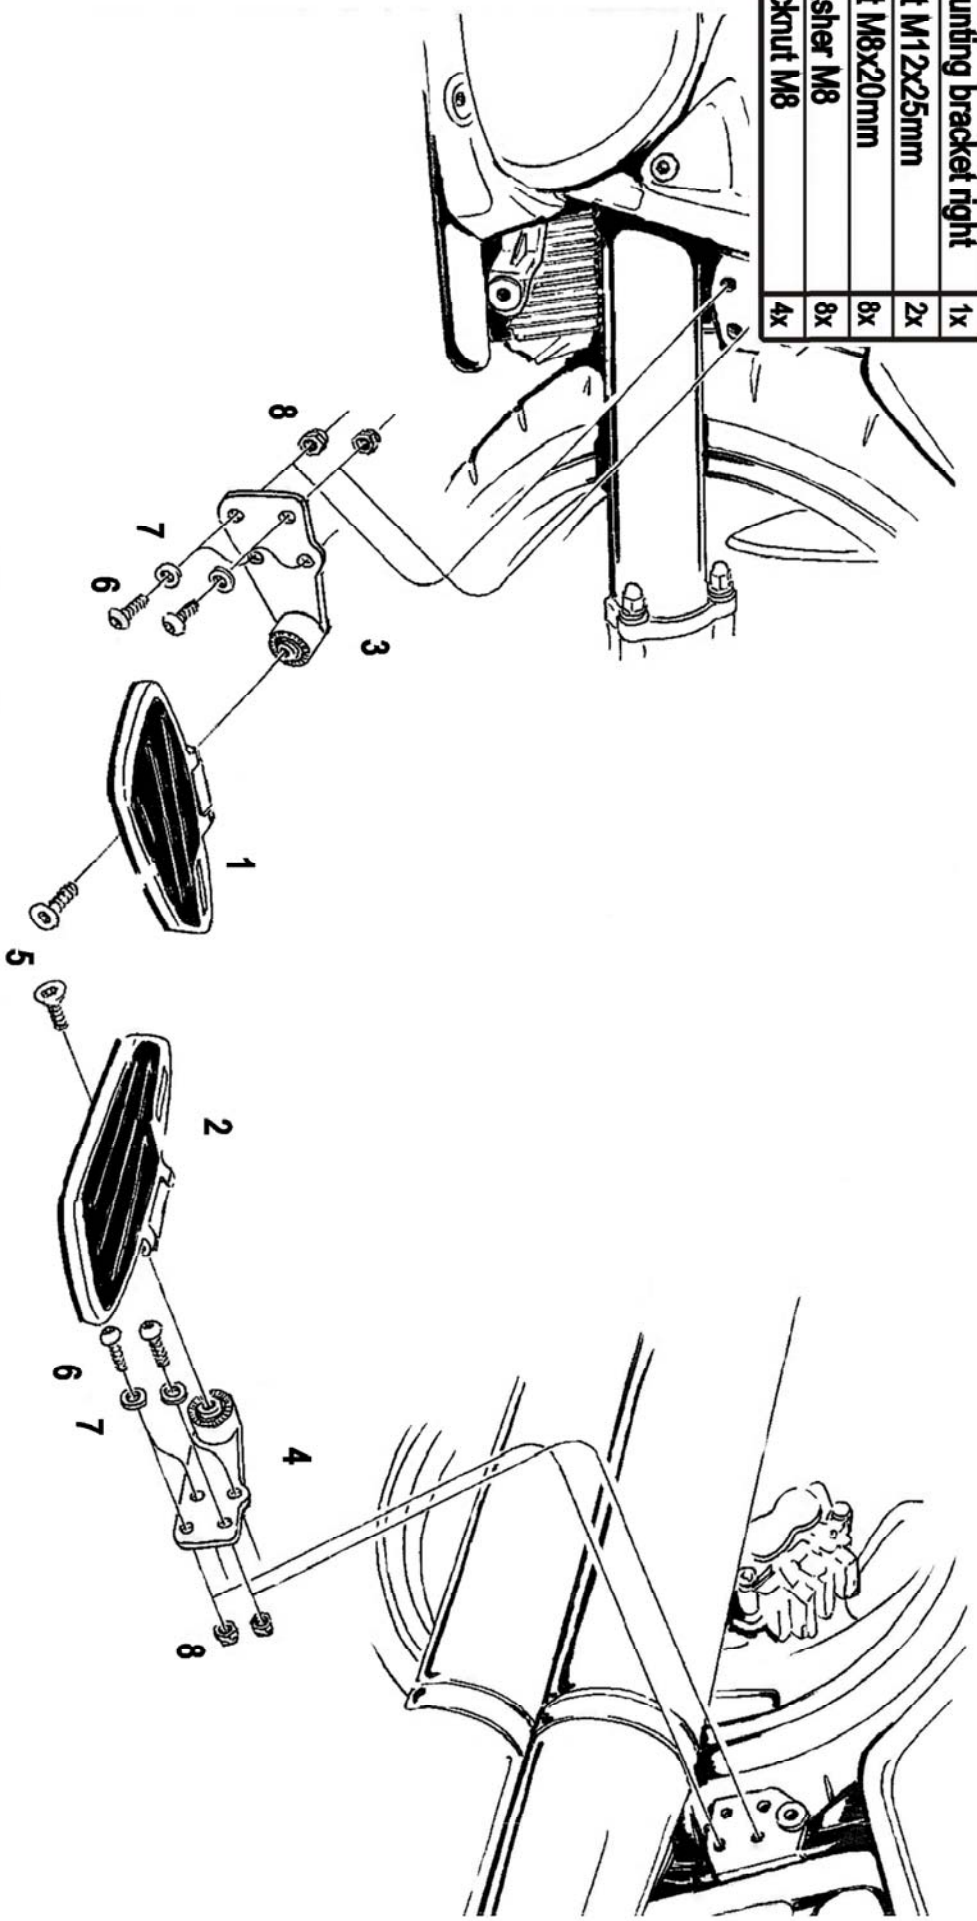

Please check all fixings and mounting points before assembly as listed on the mounting instruction sheet.

This accessory should be mounted by a professional mechanic only, Motolux International B.V. / Highway Hawk can not be held responsible for improper installation

© Motolux Specialties B.V.
Barneveld - The Netherlands