


Components		
1	Floorboard left	1x
2	Floorboard right	1x
3	Mounting bracket left	1x
4	Mounting bracket right	1x
5	Bolt M12x25mm	2x
6	Bolt M8x20mm	8x
7	Washer M8	8x
8	Locknut M8	4x

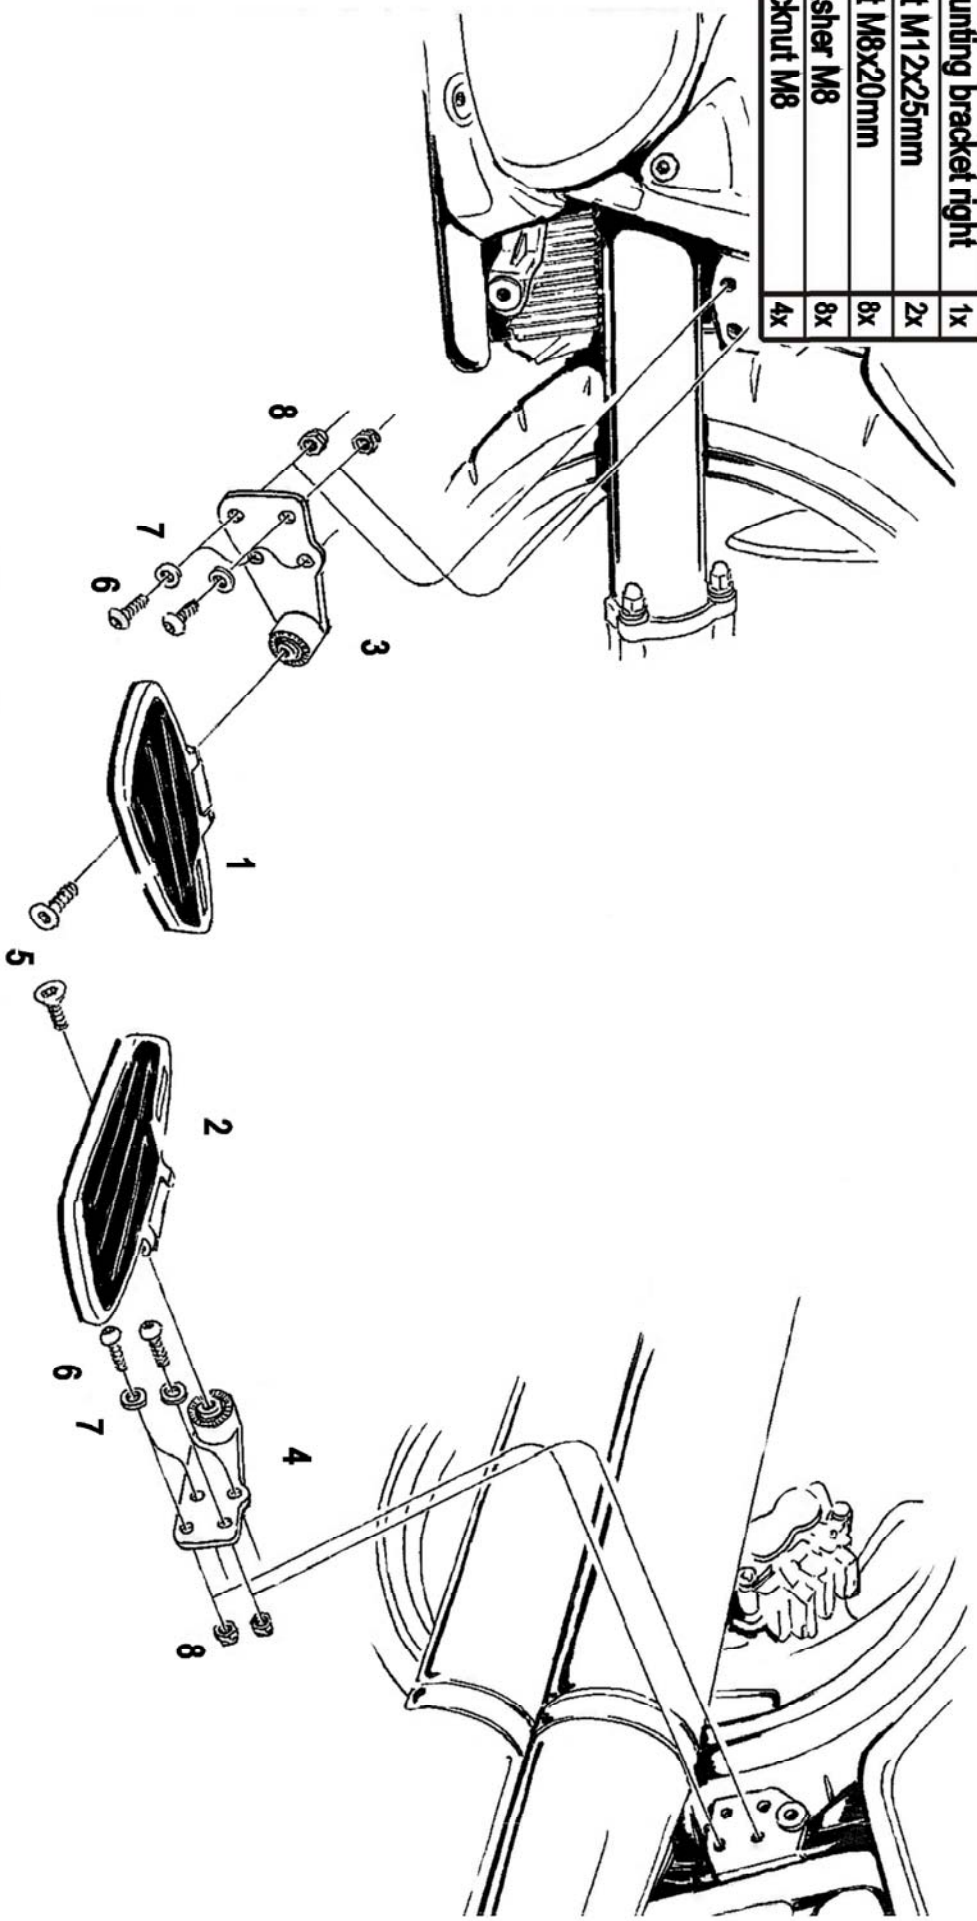

Please check all fixings and mounting points before assembly as listed on the mounting instruction sheet.

This accessory should be mounted by a professional mechanic only, Motolux International B.V. / Highway Hawk can not be held responsible for improper installation

© Motolux Specialties B.V.
Barneveld - The Netherlands