


### Components

1	Floorboard (left side)	1x
2	Floorboard (right side)	1x
3	Allenhead cone bolt M12 x 25mm	2x
4	Frame mounting plate (left side)	1x
5	Floorboard mounting plate (right side)	1x

6	Frame mounting plate (right side)	1x
7	Allenhead bolt M8 x 40mm	2x
8	Spacer Ø14 x Ø8,5 x 8mm	2x
9	Special allenhead bolt M8 x 23mm	1x

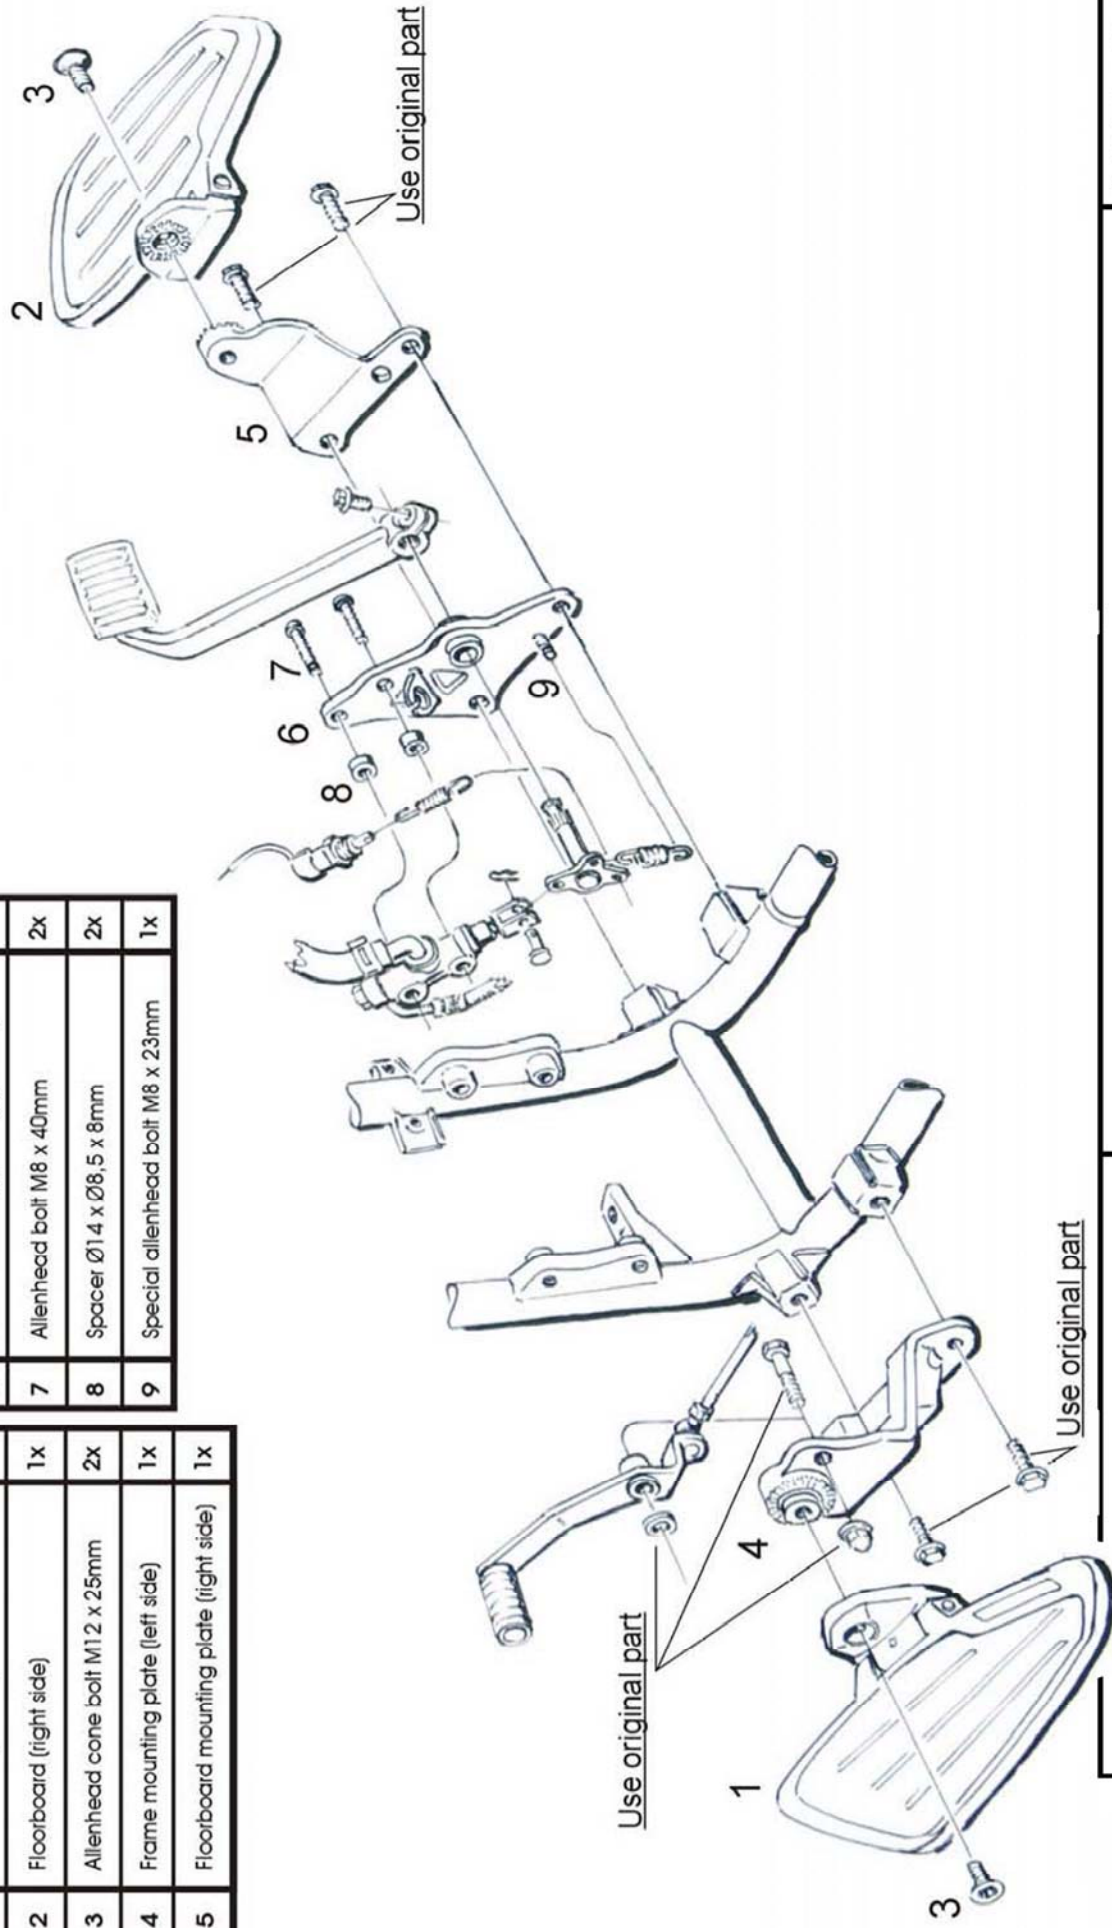

Please check all fixings and mounting points before assembly as listed on the mounting instruction sheet.

This accessory should be mounted by a professional mechanic only, Motolux International B.V. / Highway Hawk can not be held responsible for improper installation